

 
Fresco Smart Pet Fountain User Manual

宠物智能饮水机 使用说明书


Model / 型号: WF003

Please read this manual carefully before using.
Keep the manual in a safe place for future reference.
使用产品前请仔细阅读本使用说明书,并妥善保管

Inside the box

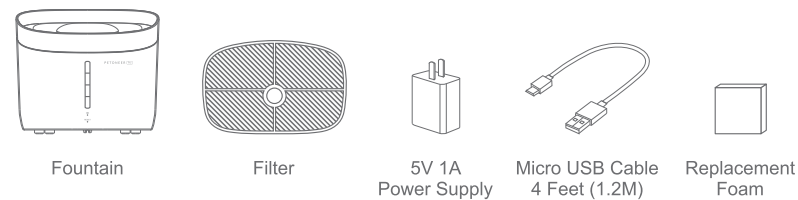

Meet your Fresco Pro

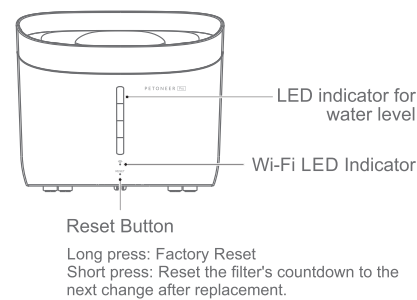 

Water Level Status



EN

LED Status

LED Status		Specification
Blue	Water Level	Model: WF003 Power Input: DC 5V 1A Capacity: 2L Communication: Wi-Fi (2.4GHz) Warranty: 1 year
Red	Filter Change Alert	

Steps to Set Up

1. Install Petoneer App
Please scan the QR code on the right, or go to Google Play or App Store to download the Petoneer app. Register and login with your email or 3rd party social account!



2. Please put the sponge in front of the water pump



3. Put the filter between the lid and the filter tray

4. Plug in the power supply

Open the Petoneer app and click the "+" icon. You will then get walked through joining the fountain to your home's Wi-Fi.
The fountain doesn't support 5G Wi-Fi, please switch to 2.4G Wi-Fi.
If the LED indicator is blinking slowly, please use a pin to long press the RESET BUTTON until you see it blink fast.

* For more detail, please refer to tutorial videos on our website.

EN

EN

FCC NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

EN

EN

Environmental Conditions

Operating Temperature: 14 °F to 131 °F, (-10 °C to 55 °C) (indoor only)

SkyRC Technology Co., Ltd. declares that this Fresco Pro(WF003), is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive (2014/53/EU).

Environment friendly disposal

You can help protect the environment!
Please remember to respect your local regulations: dispose of nonfunctional electrical equipment with an appropriate waste disposal center.

Read all the instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Do not touch hot surfaces. Use handles.
2. To protect against electric shock do not immerse cord, plug into water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts, and before cleaning the appliance.
5. Do not operate any appliance with a damaged cord or plug, should the appliance malfunction, or if it has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
6. The use of the accessory attachments is not recommended by the appliance manufacturer as it may cause injuries.
7. Do not use outdoors.
8. Do not let the cord hang over the edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.

10. Always attach the plug to appliance first, then plug the cord in the wall outlet.
11. Do not use the appliance for other than intended use.
12. WARNING: Never leave the appliance unattended whilst in use.
13. Warning: keep the supply cord away from the heating tip and metal enclosure while using.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. WARNING: This tool must be placed on its stand when not in use.

SAVE THESE INSTRUCTIONS.



Manufacturer: SkyRC Technology Co., Ltd.

4, 5, 8 Floor, Building 4, Meitai Science Park, Guangang Road, Guanlan, Longhua District, Shenzhen, China.

Warranty Terms

Within the period of warranty, if the product fails with no fault of user operations, it will be repaired at Petoneer's expense. The warranty will not cover product failure in examples below:

 
- 1). Intentional damage to the product by the user or third party.
- 2). Failure to operate or maintain the product following the (QIG) Quick Installation Guide Instructions.
- 3). Failure by natural wear and tear including but not limited to scratching, corrosion, oxidation and rusting.
- 4). Failure by non-authorized repair of the product including but not limited to user's own or third-party repairing attempts or modifications.

* All Pictures shown in the manual are for illustration purpose only.
Actual product may vary due to product enhancement.


EN

EN


包装清单

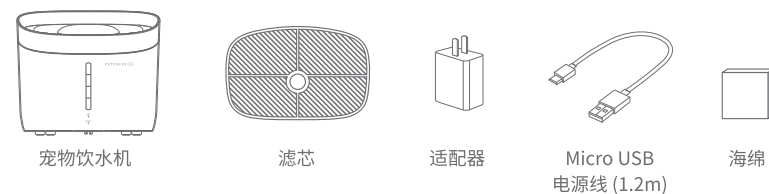

产品概览

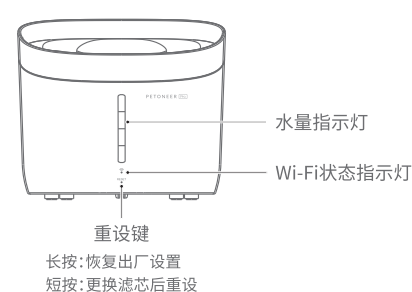 

水量状态

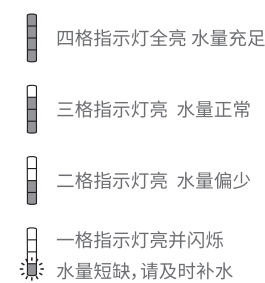 

指示灯

指示灯		基本参数
蓝色	水位显示	产品型号：WF003 工作电源：DC 5V 1A 容量：2L 通信方式：Wi-Fi (2.4GHz) 通信距离：30m 保修期：1年
红色	滤芯替换提醒	

快速设置

1. 安装“Petoneer”APP
扫描右侧二维码,或前往“Googleplay”“AppStore”下载App,并注册登陆账号
2. 请将海绵放入沉水马达前
3. 放filter,加水入机内
4. 连接电源,开始设置
连接宠物饮水机电源适配器,通电开机后,WIFI指示灯快闪,进入配置模式。
请打开“Petoneer”App,点击“+”按照提示进行设置。
饮水机不支持5GHz路由器,请使用2.4GHz路由器。
若通电开机后WIFI指示灯慢闪,请长按重置键,直至指示灯快闪。



* 详细功能教学请观看官网教学影片

中文

中文

注意事项

1. 请在室内环境使用。
2. 进行储水槽清理工作时,请勿直接冲洗水槽底部或泡入水中;进行整机清洁工作时,请断开电源。
3. 儿童需在成人指导下使用。
4. 请放置在水平地面上,以防不慎打翻,导致设备洒水或不正常工作。
5. 请做好电源线遮挡或收纳,以防宠物撕咬电线,造成触电等危险状况。
6. 本机适用于猫或中小型犬。
7. TDS数值代表水质纯度高低(TDS仅为水质评判指标之一,各国及地区水质要求标准不同,请具体结合本国标准评判)。

保修条款

在保修期限内,对于正常使用Petoneer产品过程中,由于非人为导致的损坏,所产生的维修费用和人工费用,由Petoneer承担。以下情况导致的维修不在保修条款包含中。

- (1) 故意行为导致的损坏。
- (2) 未按照产品使用说明书指引使用、保养该产品。
- (3) 设备正常磨损、腐蚀、氧化、锈垢、耗损等原因导致的损失。
- (4) 因在非Petoneer授权维修代理店或用户自身进行维修、改造、清洗而造成的损坏。

(为了提供更好的产品,我们会定期进行产品改良。产品实物可能与说明书有差异。)

www.petoneer.com

中文